

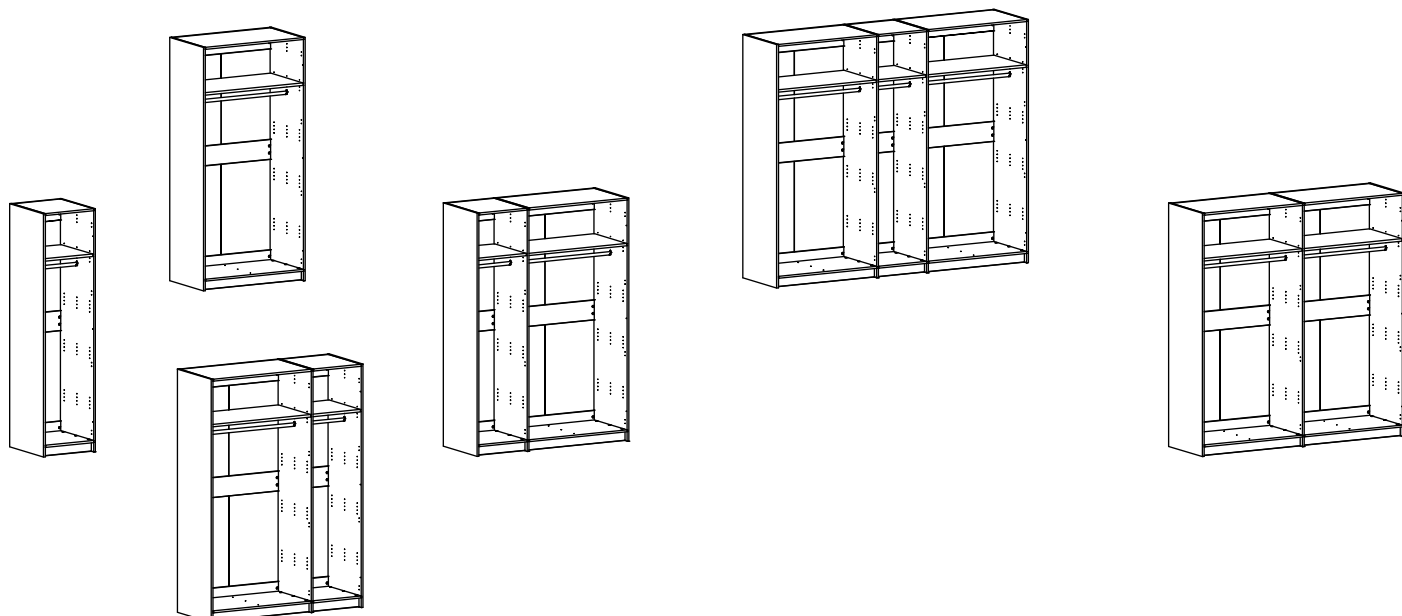
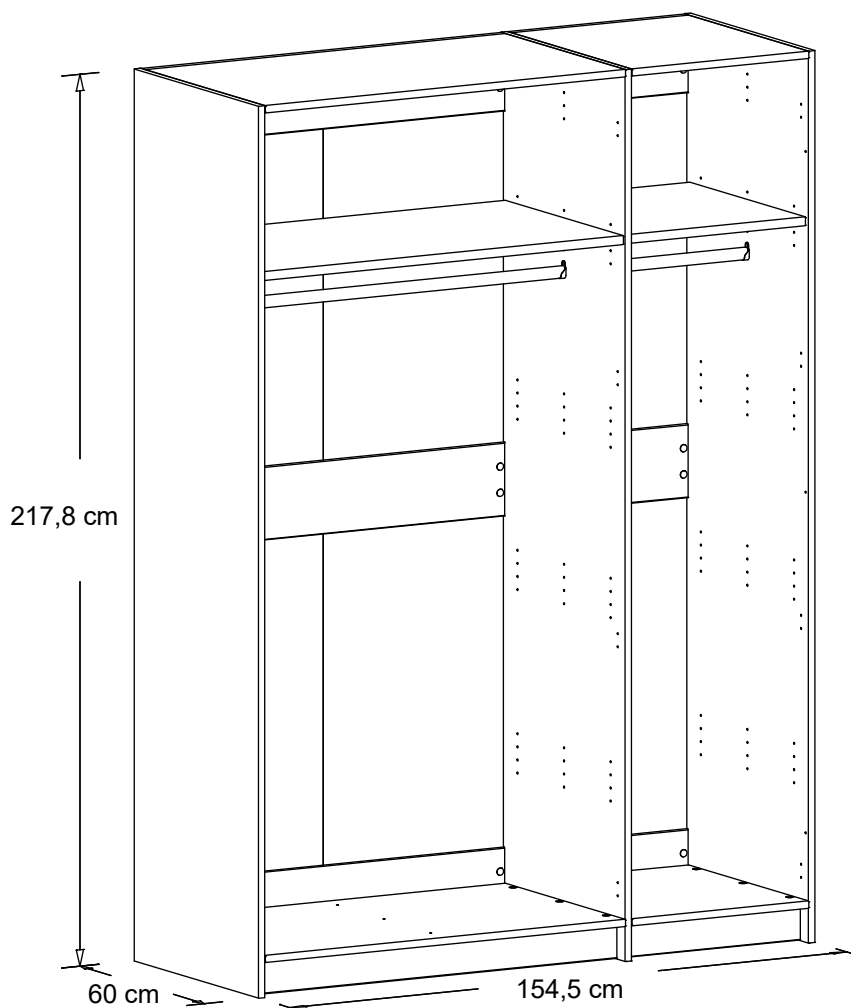


# Aufbauanleitung Drehtüren-Kleiderschrank "Capania"




## Montagehandleiding draaideurkast "Capania"

## Instructions de montage armoire à portes battantes « Capania »



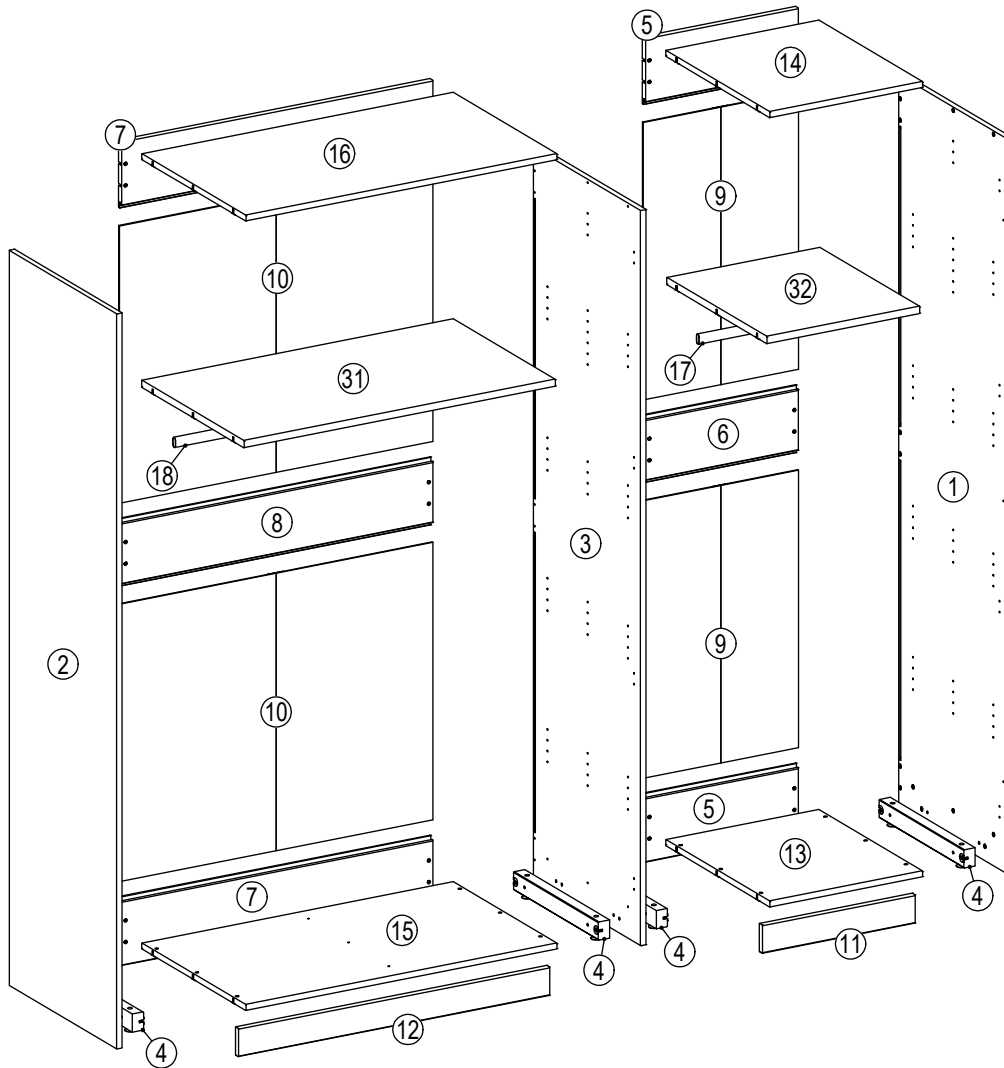






335 02 1:1

<p><b>B32</b></p>  <p>24 x M6 x 7,5mm</p>	<p><b>L06</b></p>  <p>4 x M6 x 45mm</p>	<p><b>Z04</b></p>  <p>1 x 4mm</p>
--	--	---








335 01 1:1

<p><b>B35</b></p>  <p>12 x M4 x 12mm</p>	<p><b>B36</b></p>  <p>12 x M4, ø5 x 14,5mm</p>	<p><b>L13</b></p>  <p>2 x M6 x 80mm</p>	<p><b>M01</b></p>  <p>2 x M6, ø8 x 22mm</p>
---	---	---	--








445 05 1:1

<p><b>A26</b></p>  <p>4 x ø8 x 40mm</p>	<p><b>B31</b></p>  <p>6 x ø5 x 8mm</p>	<p><b>B32</b></p>  <p>2 x M6 x 7,5mm</p>	<p><b>N13</b></p>  <p>2 x</p>	<p><b>U01</b></p>  <p>18 x ø18mm</p>
--	---	---	--	---





445 10 1:2 + 2:2

<p><b>A26</b></p>  <p>4 x ø8 x 40mm</p>	<p><b>B31</b></p>  <p>6 x ø5 x 8mm</p>	<p><b>B32</b></p>  <p>2 x M6 x 7,5mm</p>	<p><b>N13</b></p>  <p>2 x</p>	<p><b>U01</b></p>  <p>18 x ø18mm</p>
--	---	---	--	---





335 02 1:1





1

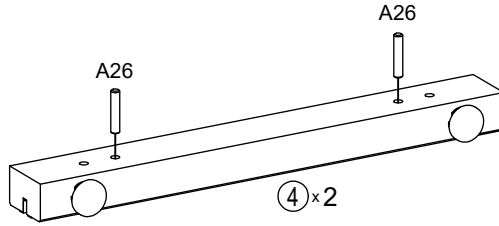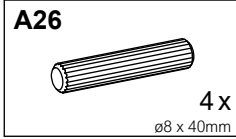

2

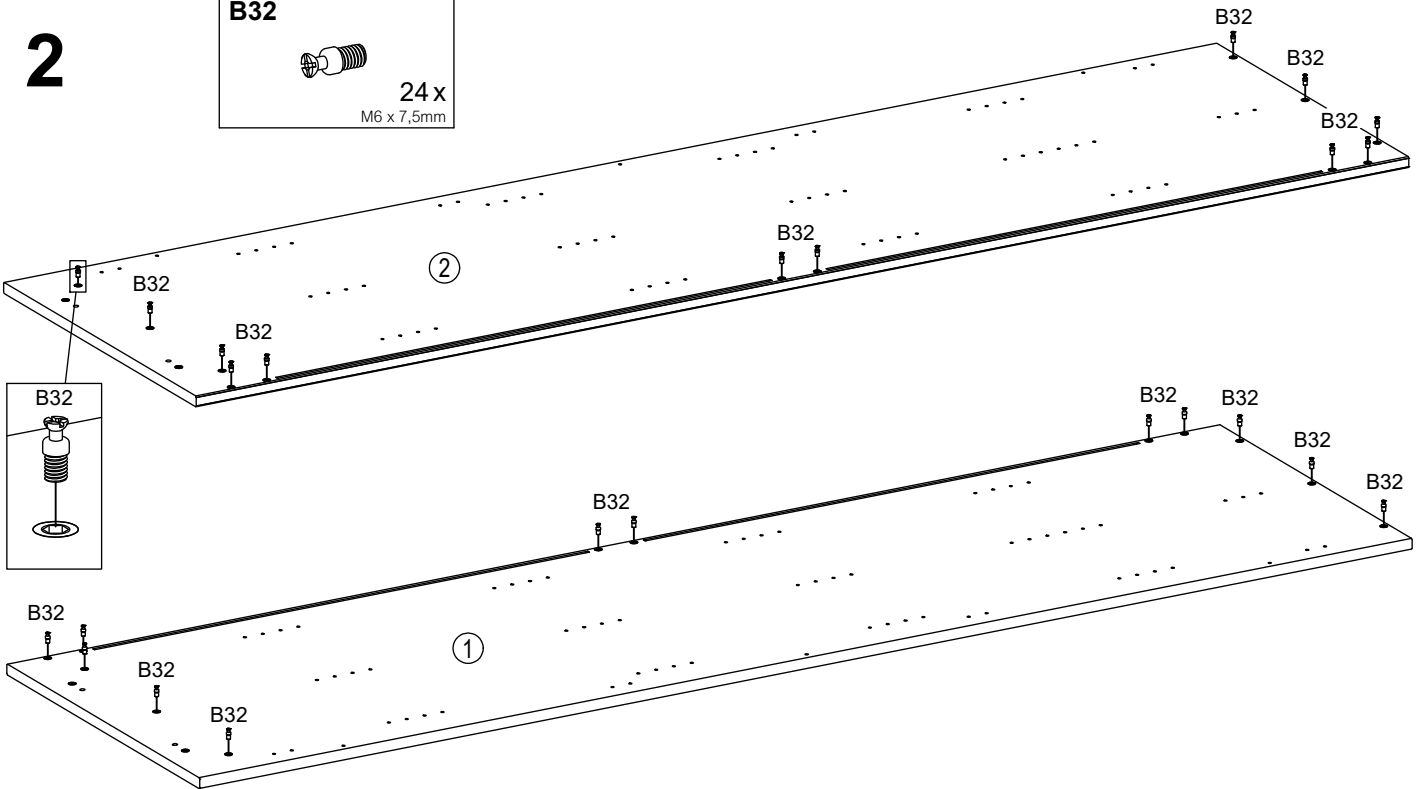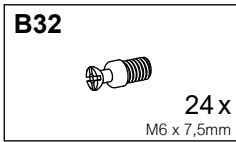


3

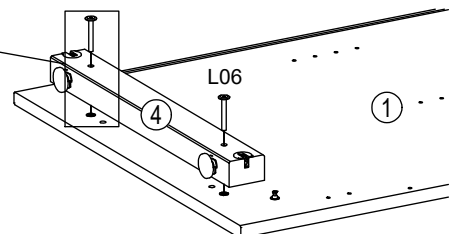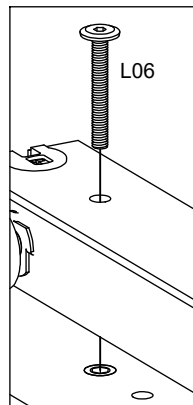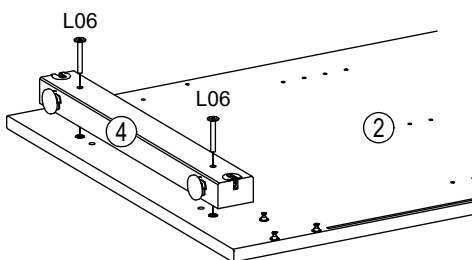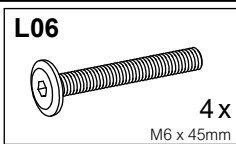




335 01 1:1

4

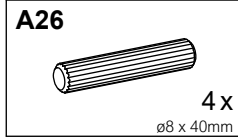

4 x

ø8 x 40mm

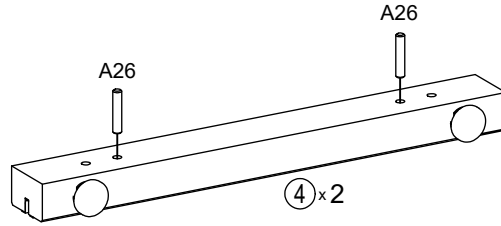


A26

A26


④ x 2

5

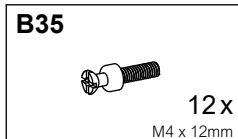


12 x

M4 x 12mm

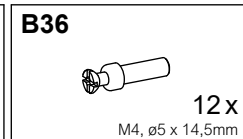

12 x

M4, ø5 x 14,5mm

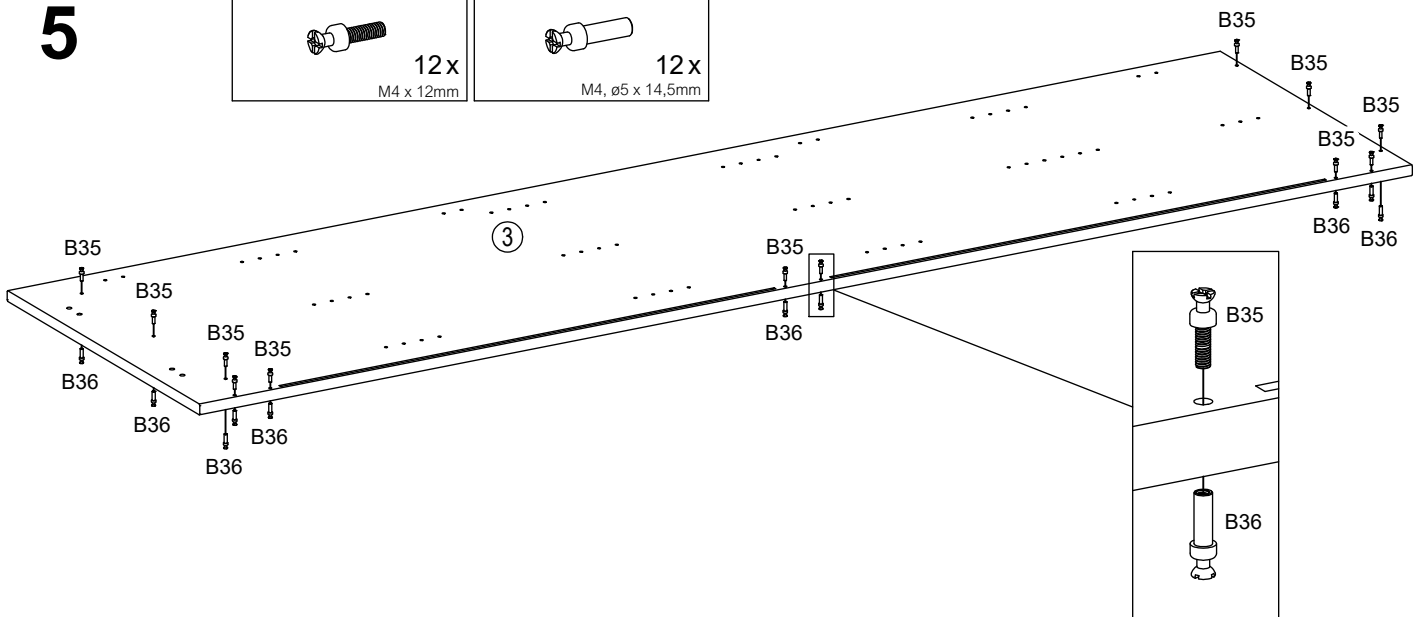

B35

B35

B35

B35

B35

B36


B36

B35

B35


B36

6

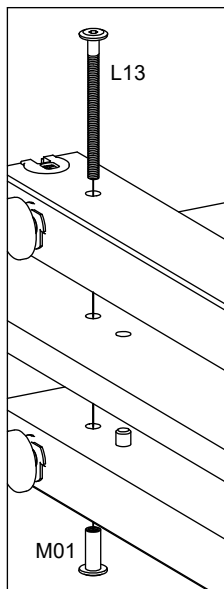

L13


M01

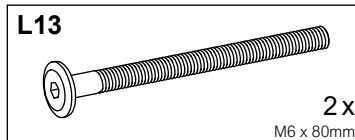

L13

2 x


M6 x 80mm

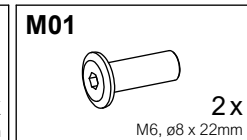

M01

2 x


M6, ø8 x 22mm

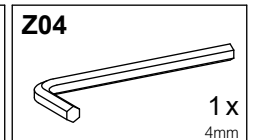

Z04

1 x

4mm

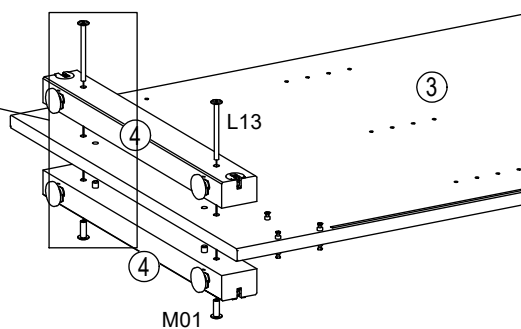


L13

④


③

④

M01






445 05 1:1




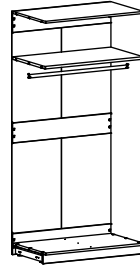


445 10 1:2 + 2:2





7

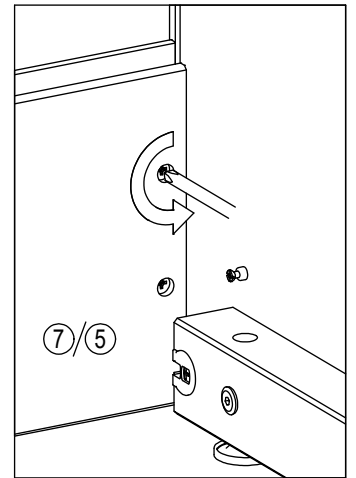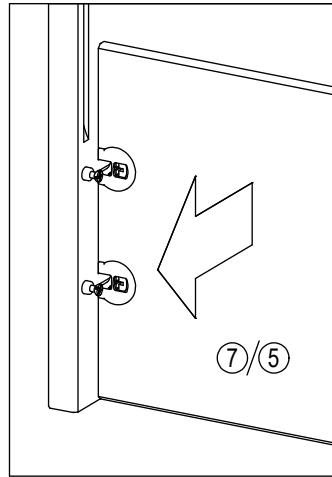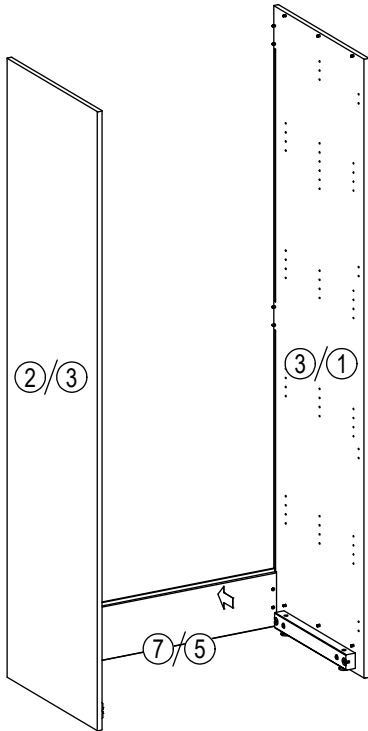





8

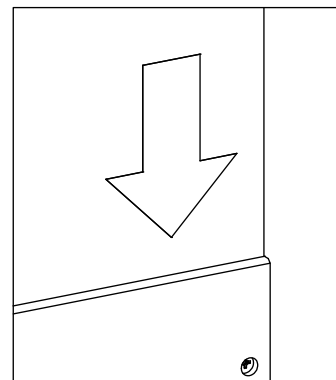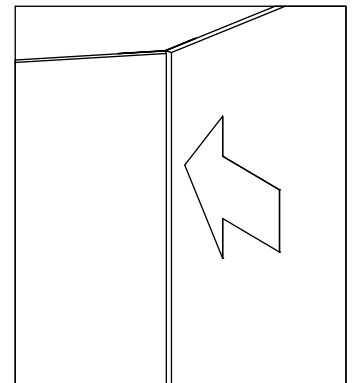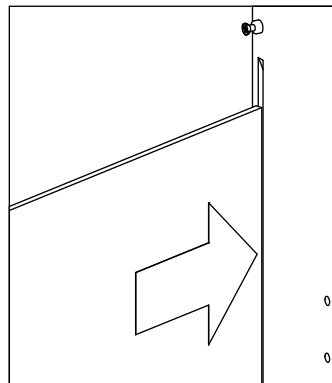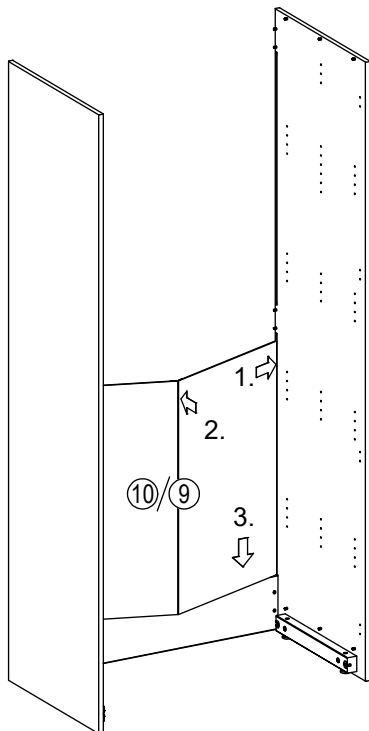





9

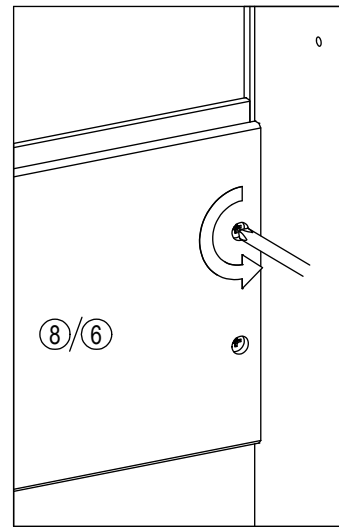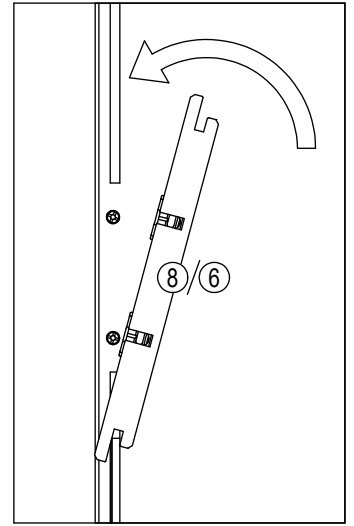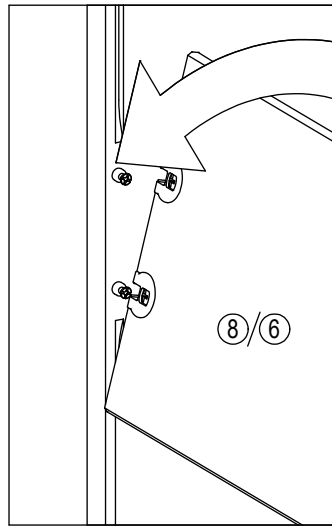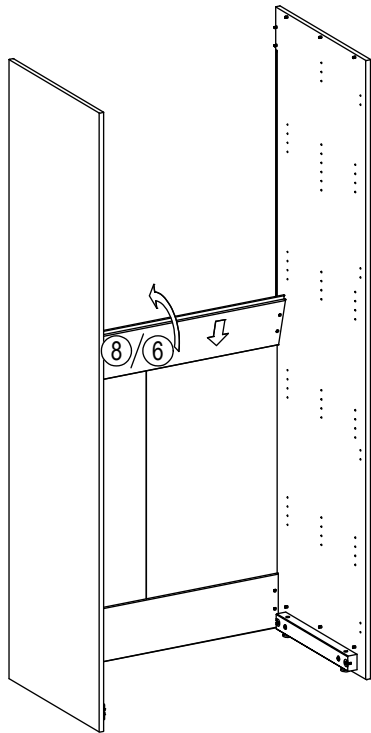



10

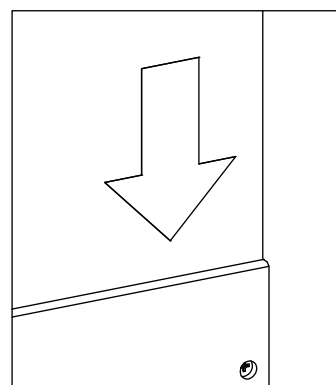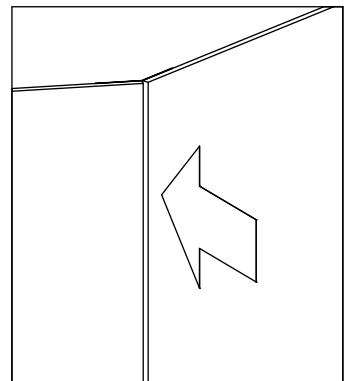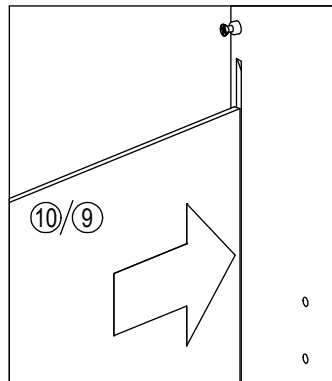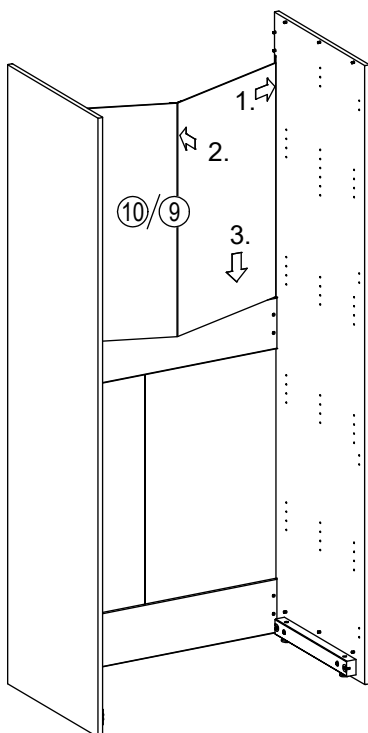




# 11

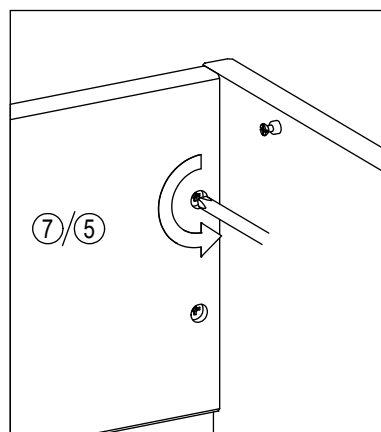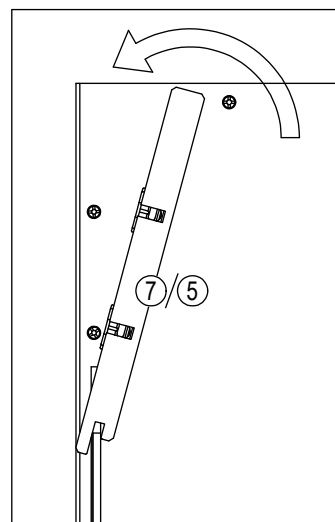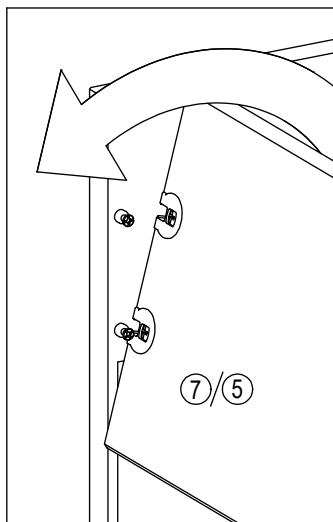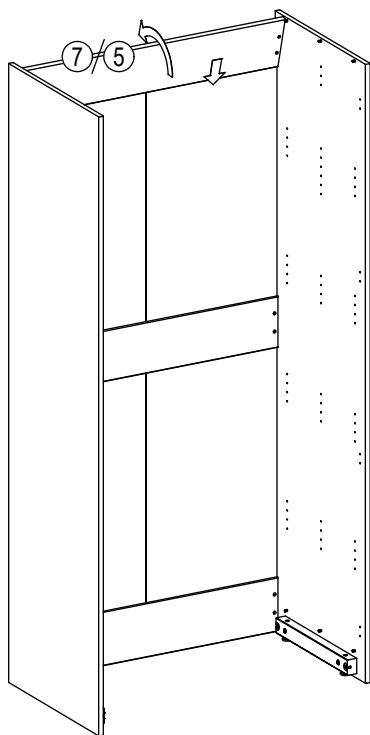



# 12

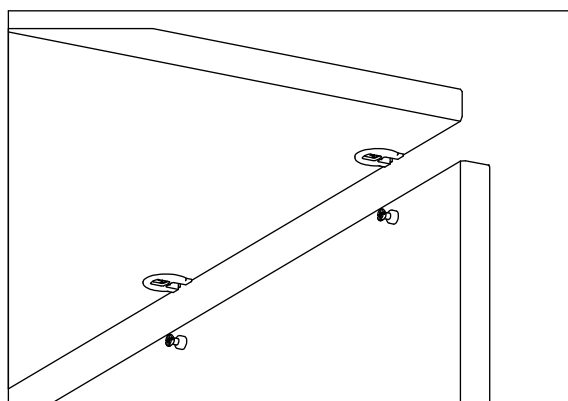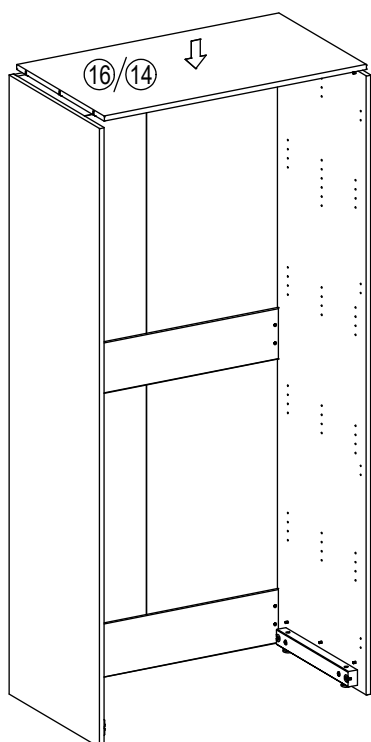




13

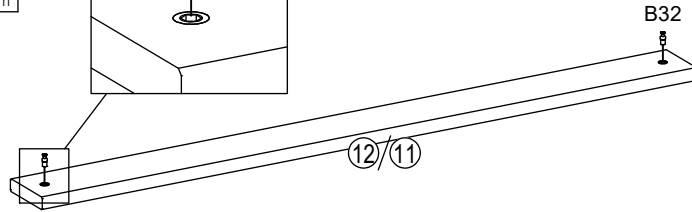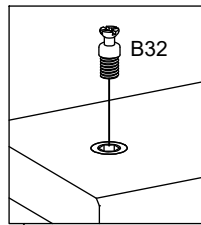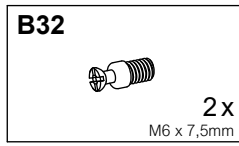

14

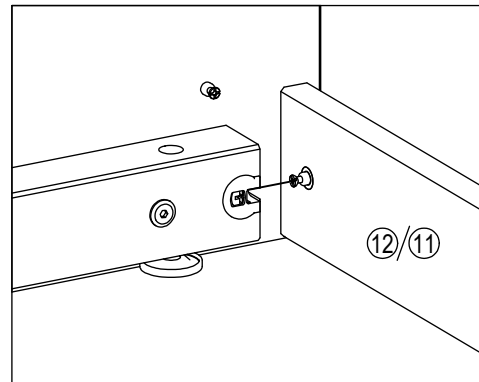
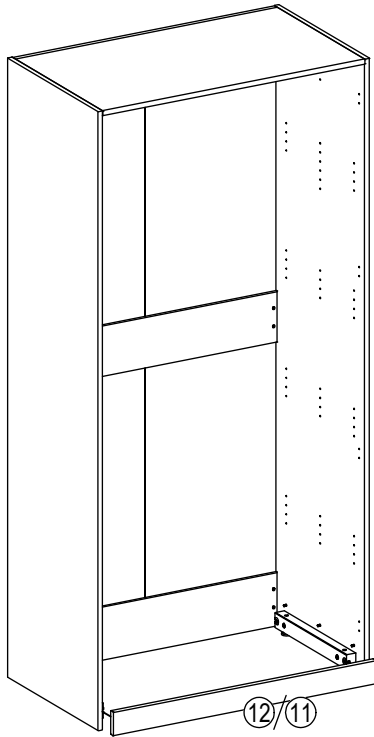


15




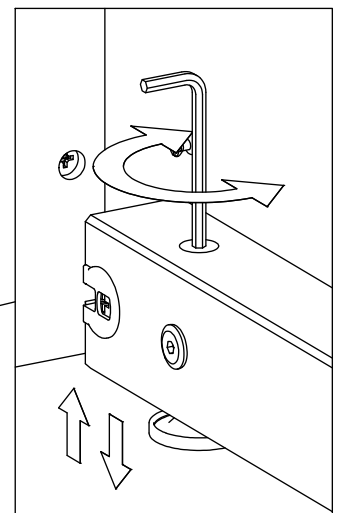
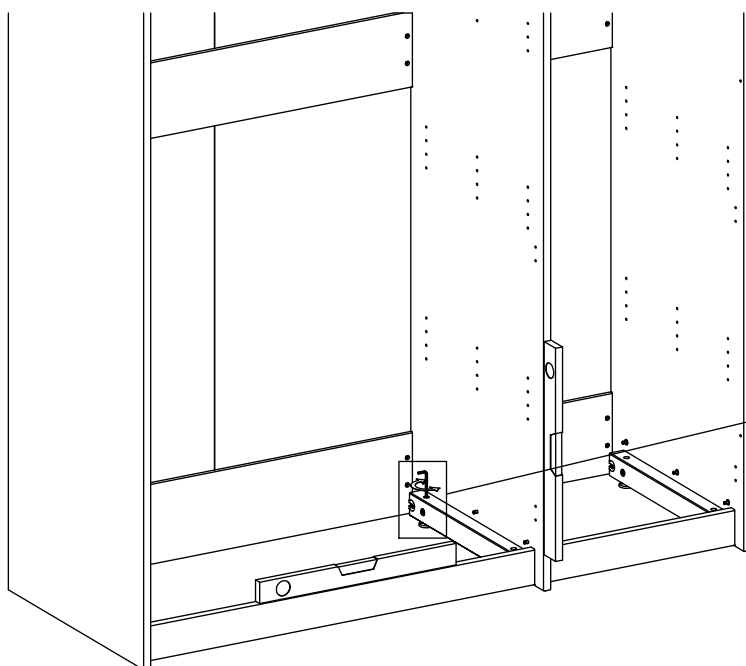
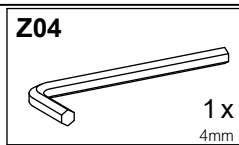






# 16

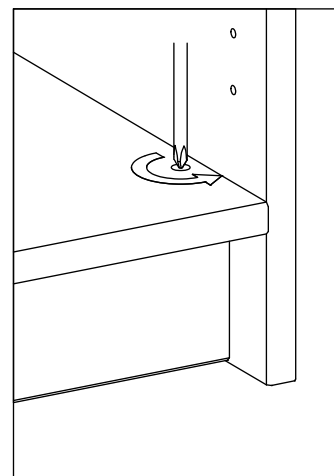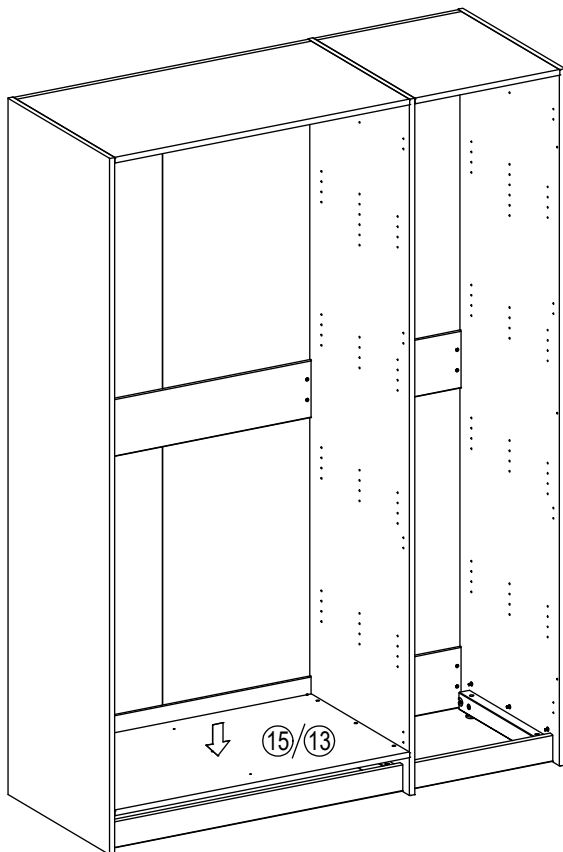


# 17

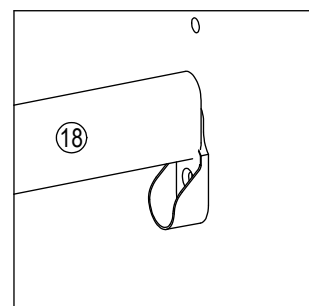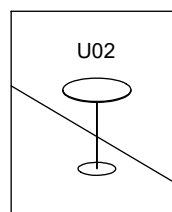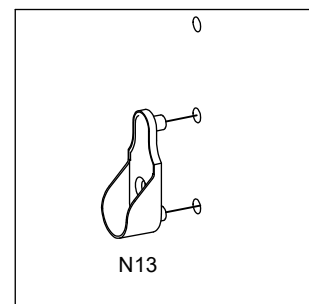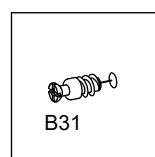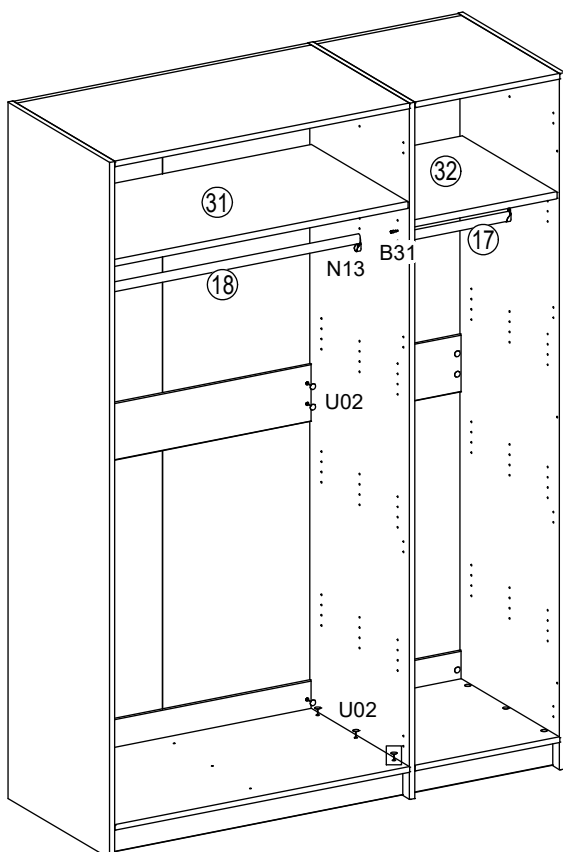
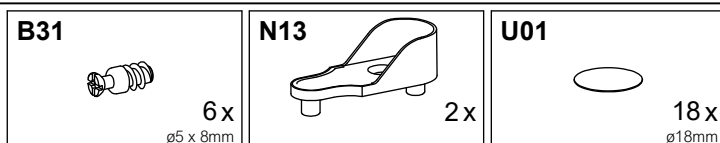


# Schranktüren Kastdeuren Portes d'armoire

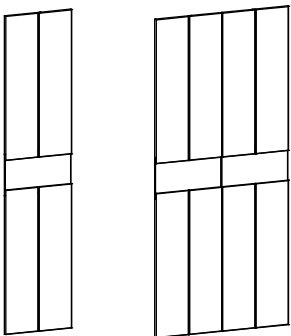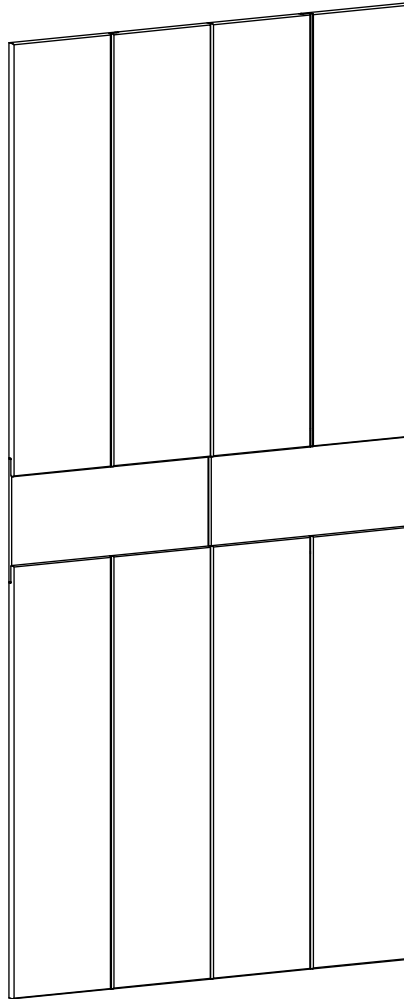






445 20 1:1

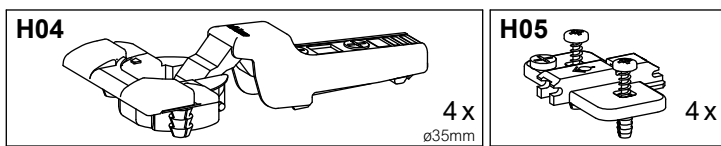






445 21 1:1

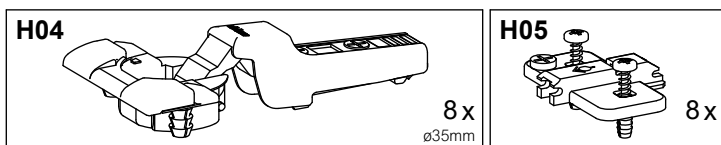




**1**

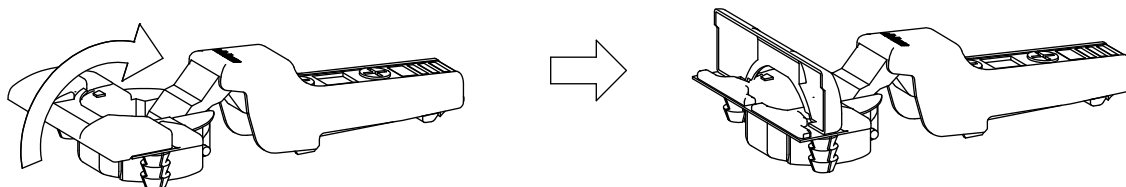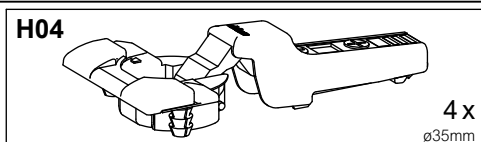




**2**

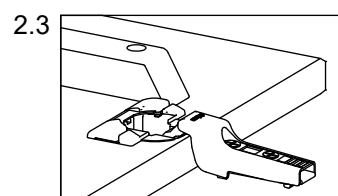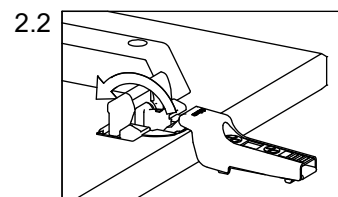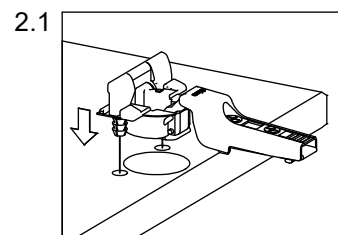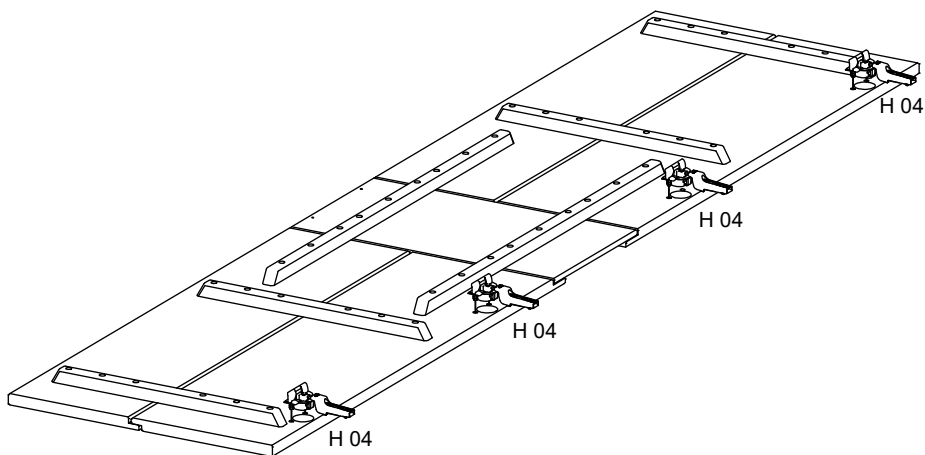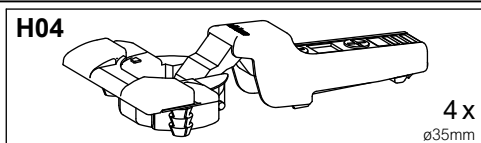

3

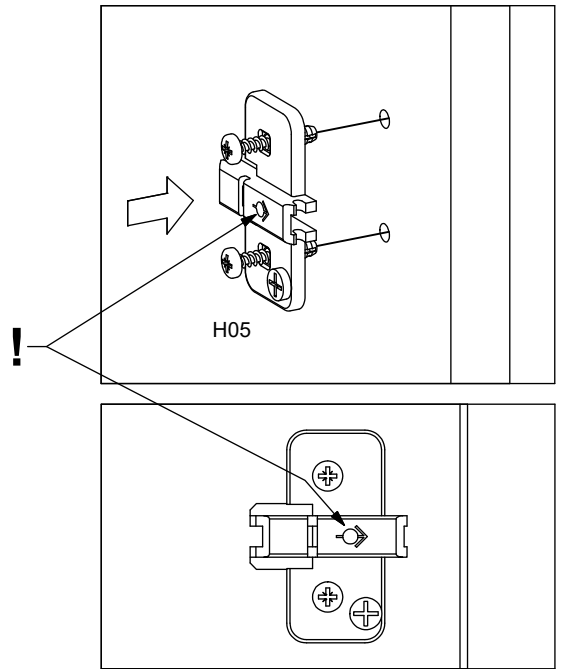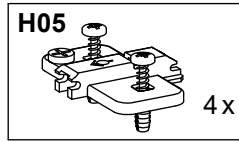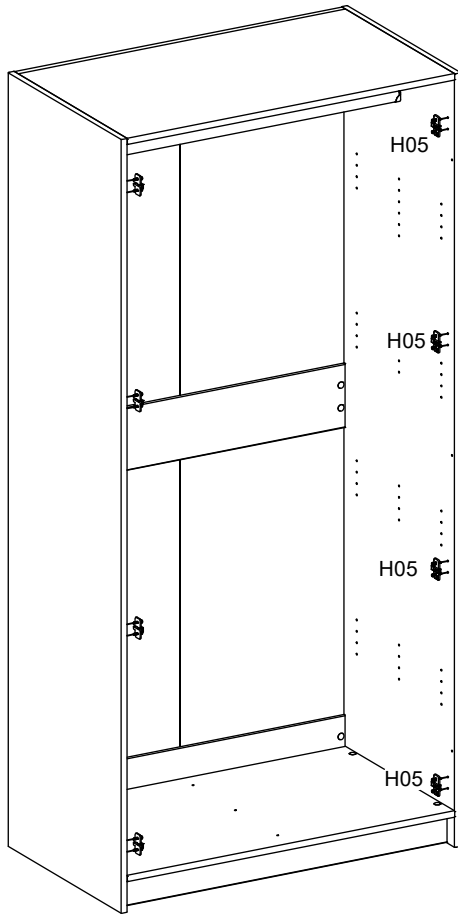

4

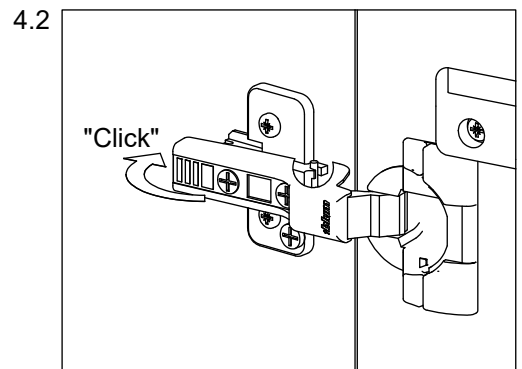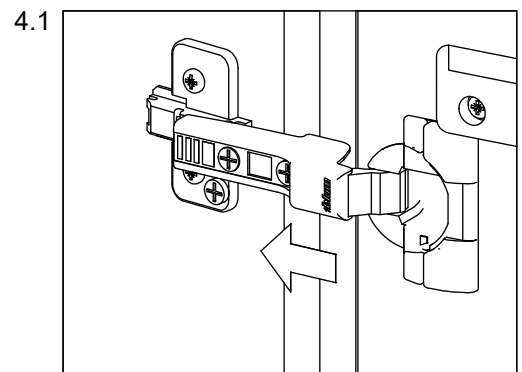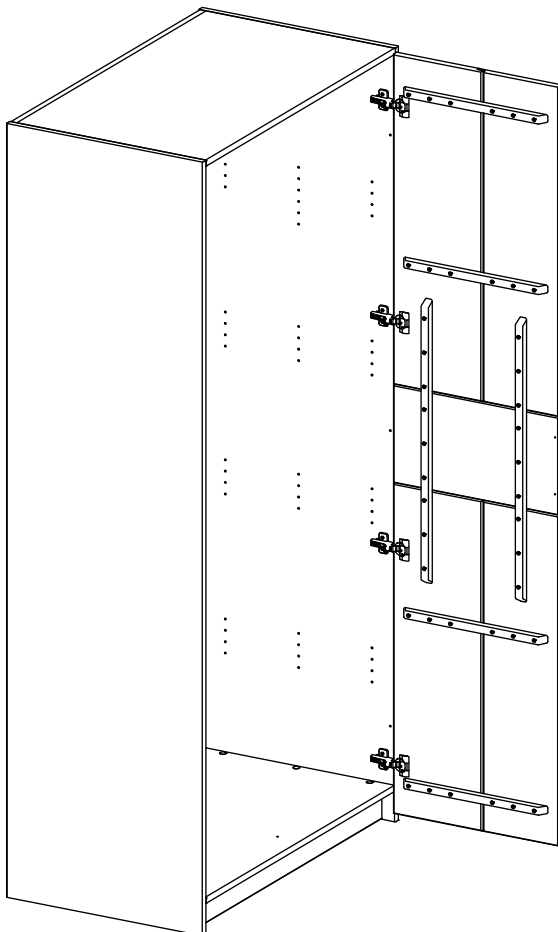

# 5

